


13. Initialization

When you lost the Configuration Card or forgot the Master PIN number, you may need to re-initialize the unit for new setup. There is a hard-wired Initialize function on the unit.

※ **WARNING:** You may lose all setup data after execute Initialize.


13-1. Hardware Initialization (When the master card or ID is lost)

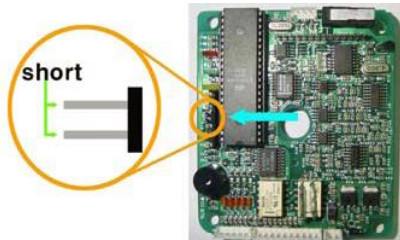


- 1) Open the top case taking out four bolts on the back.
- 2) As the left picture, make two jumpers short in state of being on power
- 3) 3-color LED blinking with beep sound indicates success of initialization

13-2. Wire Initialization

(When the master card or ID is lost, 100R: Over V5.0.0 / IP100R: Over V2.0.0)

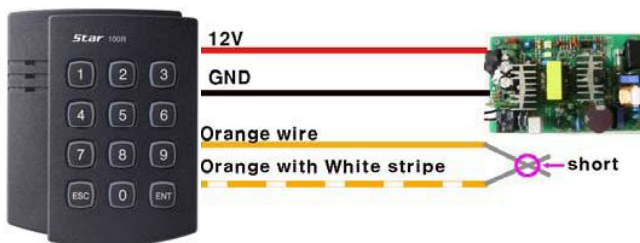

- 1) Main power off.
- 2) Connect the orange and orange with white stripe wire together and power on.
- 3) 3 color LED blinking with beep sound indicates the success of initialization.

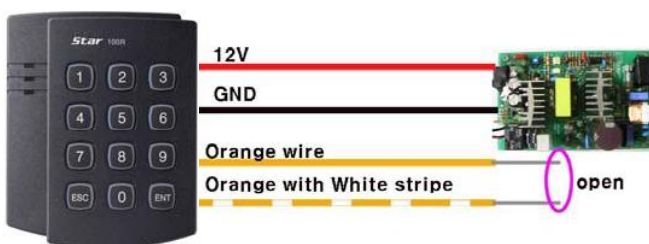

100R: Over V5.0.4 / IP100R: Over V2.0.2

- 4) Disconnect those two wires and wire them as shown above(normal connection diagram).

100R: V5.0.0 ~ V5.0.3 / IP100R: V2.0.0 ~ V2.0.1

- 4) Main power off again.
- 5) Disconnect orange wire and orange with white stripe wire as shown above (normal connection diagram) and power on.