

## **IC1000+JX / IC1000IP+JX CONTROLLER INSTALLATION AND USER MANUAL**

# TABLE OF CONTENTS

<b>1. INTRODUCTION.....</b>	<b>3</b>
<b>2. THE IC1000+ CONTROLLER .....</b>	<b>4</b>
<b>3. FIRMWARE .....</b>	<b>5</b>
<b>4. POWER SOURCES AND BOARD CONSUMPTION .....</b>	<b>5</b>
<b>5. AROUND THE BOARD.....</b>	<b>6</b>
5.1 JUMPERS AND DIPSWITCHES.....	6
<b>6. TYPES OF CABLE .....</b>	<b>7</b>
6.1 CABLE DISTANCES .....	8
<b>7. TYPES OF READER AND THEIR CONNECTION .....</b>	<b>9</b>
7.1 CONNECTING A KEYPAD READER .....	9
7.2 CONNECTING A PROXIMITY READER.....	9
<b>8. DOOR CONTACTS AND INPUT DEVICES.....</b>	<b>10</b>
<b>9. LOCK DEVICE - RELAY OUTPUTS CONNECTION.....</b>	<b>10</b>
<b>10. PC CONNECTION.....</b>	<b>11</b>
10.1 TCP/IP CONNECTION .....	11
10.2 RS232/RS485 CONNECTION .....	12
10.3 SETTING THE CONTROLLER ADDRESS .....	13
<b>11. USING THE SYSTEM.....</b>	<b>14</b>
11.1 INITIALISATION.....	14
11.2 ACCESS .....	14
11.3 EVENTS BUFFER .....	14
11.4 ALARM INPUTS .....	15
11.5 RELAY OUTPUTS.....	15
<b>12. MULTIPLE CONTROLLERS.....</b>	<b>16</b>
12.1 TCP/IP NETWORK .....	16
12.2 RS485 NETWORK .....	16
12.3 MIXED NETWORKS .....	17
12.4 ADDRESSING MULTIPLE CONTROLLERS.....	17
<b>APPENDIX A : 10 IMPORTANT RULES.....</b>	<b>18</b>
<b>APPENDIX B : TECHNICAL SUPPORT .....</b>	<b>19</b>

# 1. INTRODUCTION.

As with all Sensor controllers, the IC1000+JX and the IC1000IP+JX are based on microprocessors which are designed to operate 24 hours a day. Like all our controllers, the IC1000+ range can be connected to various external elements such as card readers, electric locks, alarm detection devices, printers, computers, etc., but the installer should be aware that this kind of system can be subjected to the following problems:

- 1- Electro Magnetic Interference (EMI). EMI can be present along the cables that connect the controller to the external elements. Undesired voltage may result in erratic behaviour, random power ups, or even in serious damage.
- 2- The Exterior Elements themselves. In cases where readers, door locks, alarms, etc., have not been supplied/recommended by Sensor, erratic behaviour or complete failure can sometimes result.

Whilst Sensor equipment is manufactured with as much protection as possible from EMI interference, and despite the fact that Sensor equipment is fully compatible, some installations may be in unsuitable or hostile environments which can adversely affect the system. In order to minimise this risk, there are a number of basic rules that should be followed in order to provide maximum protection:

It is absolutely imperative that, from the moment a Sensor controller is installed, the individual responsible for the installation adheres to the directives listed below. Should any of these directives not be adhered to, Sensor cannot assume responsibility for any problems that might be encountered.

1. The control unit must never be installed inside a high voltage electrical power box, nor must it be placed in close proximity to large transformers and/or high voltage/current source devices. Since the controller may require maintenance, it is also important to consider the accessibility of the unit.
2. The IC1000+ boards must be separately grounded, so it is important to ascertain whether the installation site can provide adequate grounding facilities.
3. It is essential to plug the mains power cable into a clean line (i.e. a line not being used by other pieces of equipment), or into an independent line which has been specifically allocated to the controller.
4. The cover or case that contains the controller should be tightly screwed down or locked in place.
5. Never use the system cables guide to pass wires from another system, such as using a conduit also used by other cables.
6. Generally speaking, there are five categories of cable that can go to or from the controller, as listed in section 5. These cables must be installed as far as possible one from the other, and should always be of the types recommended, or their equivalents.

## 2. THE IC1000+ CONTROLLER

### (1) - Reader Settings

Reader Type		Controller
SP-MINI	SP-KPV	1000+
RED (Vcc)	RED (Vcc)	N/A <sup>1</sup>
BL-ACK (0v)	BL-ACK (0v)	N/A <sup>1</sup>
GREEN (Data0)	GREEN (Data0)	CK <sup>2</sup>
WHITE (Data1)	WHITE (Data1)	DT <sup>3</sup>
BROWN (Lcd)	BROWN (Lcd)	LD <sup>4</sup>
N/A	YELLOW (Buzz)	BZ

- <sup>1</sup> Reader power wires should connect to the PSU Board
- <sup>2</sup> The board is printed CK1 and CK2.
- <sup>3</sup> The board is printed DT1 and DT2.
- <sup>4</sup> The board is printed LD1, LD2, LD4 and LD5.

### (2) - Address Settings


- 1 Locate the DS1 switch at the bottom-middle of the panel.
- 2 For most proximity and biometric readers, ensure that switch 6 is set to ON (right). All others should be OFF (left).

Switch 1 2 3 4 5	Address	Switch 1 2 3 4 5	Address
00000	00	00001	16
10000	01	01001	17
01000	02	11001	18
11000	03	00101	19
00100	04	00101	20
10100	05	10101	21
01100	06	01101	22
11100	07	11101	23
00010	08	00011	24
10010	09	10011	25
01010	10	01011	26
11010	11	11011	27
00110	12	00111	28
10110	13	10111	29
01110	14	01111	30
11110	15	11111	31

### (3) - Communication Settings

The cable connecting the USB-485 device to the controller is shielded. Always ensure that any RS485 wire shields are linked together, and that they are connected at the USB-485 interface end. Never connect the shielding at the controller end.

If the distance between the converter and the controller is greater than 500m, then you must install a 120 ohms terminator resistor at the far end of the RS485 line (i.e. at the last controller). No resistor is needed for distances less than 500m.

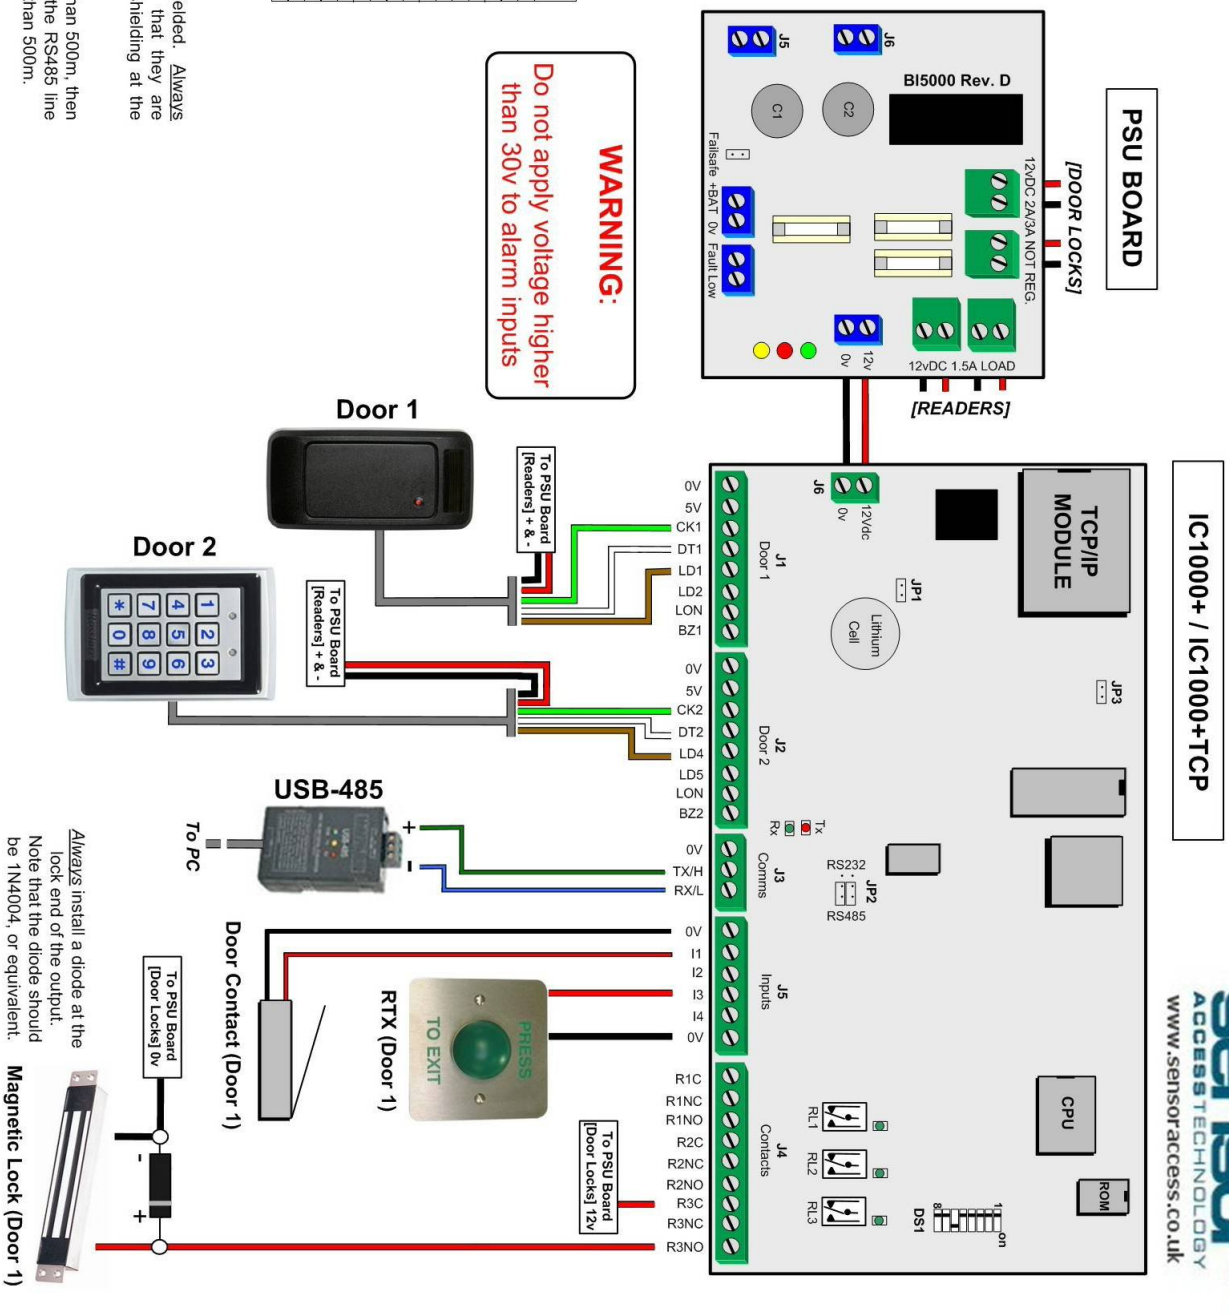

### 3. FIRMWARE

Both the IC1000+JX and IC1000IP+JX boards have open (changeable) flash firmware installed on their ROM chip in the upper-right of the board. This firmware has been pre-configured to allow up to 10,000 individual users to be stored in the board's memory, and is further controlled by Sensor's access control software, GuardPoint Pro and GuardPoint Pro Lite.

### 4. POWER SOURCES AND BOARD CONSUMPTION

The board is powered by a 12vDC current. With no external devices (readers, locks, alarms, etc.) attached, the board's consumption is 120mA maximum (IC1000+JX), or 370mA maximum (IC1000IP+JX). The maximum consumption allowed through the 5V terminals on terminal blocks J1 and J2 is 150 mA.

When supplied in a metallic housing, Sensor's Power Supply Unit (PSU) board is also usually present. With this supply, you are given five independent outputs:

- |                                |  |
|--------------------------------|--|
| - 2 x green 12V/1.5A terminals | - for powering the card/fob readers    |
| - 2 x green 12V/2A terminals   | - for powering the electric door locks |
| - 1 x blue 12V terminal        | - for powering the controller          |

Two LEDs indicate the status of the mains power input and the 12V/1.5A outputs.

An output, Power Failure, indicates the mains power status, and may also be directly connected to an alarm input in order to raise an alert if the main power should fail.

In addition to the mains power cable, the PSU is also capable to drawing from a 12vDC 6A/H Lead-Acid Rechargeable battery. With such a battery, the autonomy of the system is as follows:

- |   |  |
|---|--|
| - IC1000+ with 2 readers:                           | 30 hours   |
| - IC1000+ with 2 readers at 100 door openings/hour: | 22 hours (assuming a 4 sec. opening of a 12V/0.5A electric lock) |

In the case of power failure, these two outputs are connected together so that the battery powers both the IC1000+, and the electric locks. A jumper may be disabled to prevent this feature and force the battery to power only the IC1000+.

#### **Important!**

- Whilst most card readers can be connected to the 5V terminal on the IC1000+, we strongly advise that all readers, regardless of their type, are powered directly from the 12V/1.5A terminals on the PSU.

## 5. AROUND THE BOARD

Both the IC1000+JX and IC1000IP+JX use the same circuit board, with just the presence/absence of the TCP/IP module being the only difference. The basic layout of the board can be seen below:

### Terminal Blocks


J1	Reader 1
J2	Reader 2
J3	RS485/RS232 connection
J4	Relay 1 - 3 connection
J5	Input 1 - 4 connection
J6	Power (12vDC)

### Jumpers

JP1	Maintains power to board
JP2	Selects RS485 or RS232
JP3	Board reset jumper

### Dipswitches

DS1	Address, see Section 10.3
-----	---------------------------

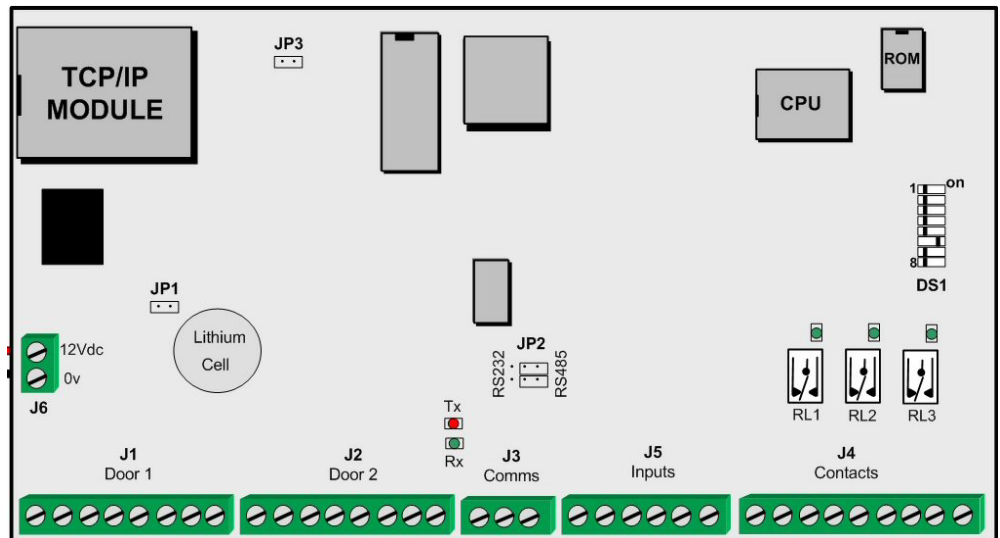

### 5.1 Jumpers & Dipswitches

Both the IC1000+JX and the IC1000IP+JX have three sets of jumpers and one set of dipswitches, all of which are important for the smooth function of the board.

#### Jumpers

##### *JP1 – Battery Jumper*

Located:	Middle-left of the board, to the top-left of the Lithium-Ion battery
Function:	Maintains the power to the battery. The board will not work without this jumper
Default:	On (shorted)

##### *JP2 – Communication Jumpers*

Located:	Bottom-middle of the board, just above the communication terminal, J3
Function:	To swap between RS232 and RS485 communication protocol
Default:	As required, see Section 10.2

##### *JP3 – Reset Jumper*

Located:	Top-left of the board, to the right of the TCP/IP module area
Function:	Resets the board when shorted and clears the memory of the flash ROM
Default:	Off (not shorted)

#### Dipswitches

##### *DS1 – Red 8 Switch Bank*

Located:	Middle-right of the board
Function:	Sets both the controller address and the data type of the connected readers. Switches 1 to 5 control the address settings. Switch 6 on, switches 7 & 8 off sets the data type to Wiegand (with parity) Switch 7 on, switches 6 & 8 off sets the data type to Wiegand (without parity) Switch 8 on, switches 6 & 7 off sets the data type to Pac Easykey Switches 6 & 7 on, switch 8 off sets the data type to Touch Switches 6 & 8 on, switch 7 off sets the data type to Radio Switches 7 & 8 on, switch 6 off sets the data type to Watermark Switches 6, 7 & 8 on sets the data type to Mag ISO1 or Barcode 2/5
Default:	Switches 1 to 5 as required, see Section 10.3 Switch 6 on, switches 7 & 8 off

## 6. TYPES OF CABLE

Any standard installation will have five basic categories of cable:

### 1) The Mains Power Cable

This will generally be the cable that connects the PSU (Power Supply Unit) to the mains power.

- *Sensor recommend a 3 lead cable, with one marked as Earth according to the standards applied in each country*

### 2) The Cables that Connect the Readers

Each reader comes complete with a length of cable attached. However, there may be times when you want to extend this cable further. In these situations, it is important to select the correct type.

- *Sensor recommend Belden 9421 for Proximity/Keypad readers and Belden 8458 for Biometric readers*

### 3) The Cables that Connect the Alarms, Buttons, etc.

These cables will be any which connect your Request To Exit (RTX) buttons, alarms, or other external devices to the controller. Generally speaking, these cables should be as short as possible.

- *Sensor recommend any 22AWG, 2 conductor cable*

### 4) The Communication Cable(s)

These will fall into one of three types, depending on your network configuration; TCP/IP, RS232 or RS485.

- *Sensor recommend Belden 1624P for TCP/IP, Belden 8443 for RS232 and Belden 9841 (a shielded, twisted pair cable) for RS485*

### 5) The Cables that Connect the Locks or other External Release Devices

These cables will be any which connect your electric locks or other release devices to the controller. Like any cable, these should ideally be as short as possible.

- *Sensor recommend any 18AWG, 2 conductor cable*


Although Sensor recommend Belden cable, you can use an equivalent cable type. In order to provide you with a basis of comparison, here are those cable types in greater detail:

<b>Cable Use:</b>	Proximity / Keypad	Biometric	RS232	RS485	TCP/IP
<b>Recommended:</b>	Belden 9421	Belden 8458	Belden 8443	Belden 9841	Belden 1624P
<b>Gauge:</b>	22AWG	22AWG	22AWG	24AWG	24AWG
<b>Shielded:</b>	No	No	No	Yes	Yes
<b>Twisted:</b>	No	No	No	Yes	Yes
<b>No. Conductors:</b>	8	15	3	2	8
<b>No. Pairs:</b>	0	0	0	1	4
<b>Stranding:</b>	7x30	7x30	7x30	7x32	Solid
<b>Resistance:</b>	10Ω/100m @ 20°C	10Ω/100m @ 20°C	10Ω/100m @ 20°C	16Ω/100m @ 20°C	16Ω/100m @ 20°C



## 6.1 Cable Distances

As important as cable type is the question of cable distance, particularly if the installation is an unusually large one. As a general rule, the longer the cable, the greater the potential for problems.

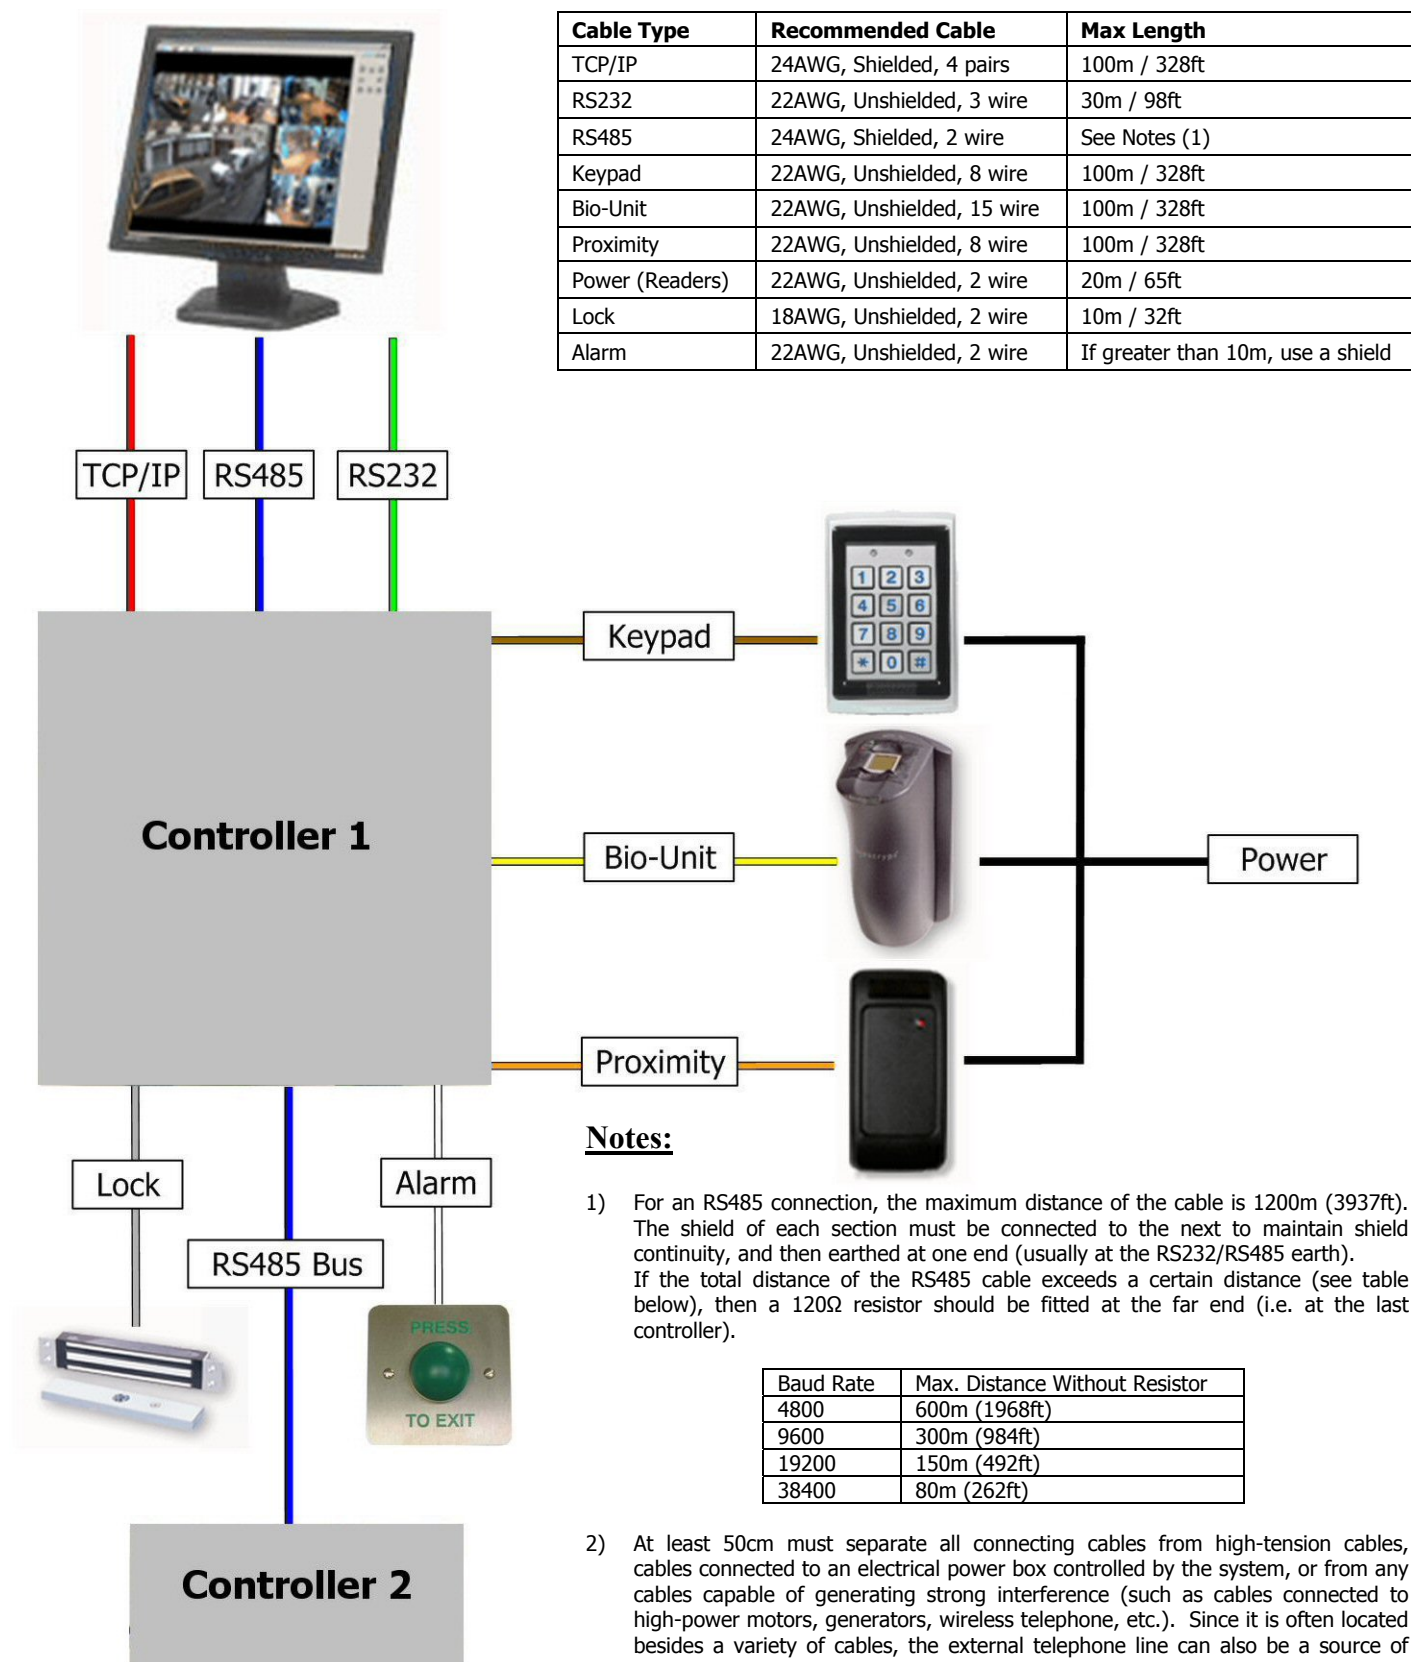



## 7. TYPES OF READER AND THEIR CONNECTION

The IC1000+ controllers can recognise almost any kind of reader technology, and – with the use of switches 6, 7 and 8 on the dipswitch bank DS1 – can be set to interact with them effectively, however, for the vast majority of installations dipswitch 6 should be set to ON and switches 7 & 8 set to OFF.

Since the vast majority of installations will involve products from either our keypad range or our proximity reader range, details for wiring them are reproduced here. If you intend to use different technologies, please refer to the relevant manual, or contact Sensor's technical support department on +44 (0) 870 890 1154.

### 7.1 Connecting a Keypad Reader



#### Sensor Available Models :

SP-KPV

KPV

#### To Extend Cable Use:

Belden 9421 (22AWG, non-twisted, 8 conductor). Maximum length: 100m.

#### Notes:

Must be programmed prior to use. To program either model, press the hash (#) key four times, then enter the security code (1 2 3 4 by default). Press the digit 1 to select the programming type, then press the digit 3 to select the programming option. The unit is now ready for use.

WIRE	PSU BOARD	IC1000+JX / IC1000IP+JX CONTROLLER
RED (+V)	12vDC 1.5A	
BLACK (0V)	0vDC 1.5A	
GREEN (Data-0)		CK1 / CK2
WHITE (Data-1)		DT1 / DT2
BROWN (LED Control)		LD1 / LD4
PURPLE (Tamper)		If required, connect to a spare input on controller

### 7.2 Connecting a Proximity Reader



#### Sensor Available Models :

SP-MINI

SP-SG

SP-VRS

#### To Extend Cable Use:

Belden 9421 (22AWG, non-twisted, 8 conductor). Maximum length: 100m.

#### Notes:

Some models of the SP-VRS and some older models of the SP-MINI also have Orange and Yellow wires. For these, the Orange cable should be wired to the first LED terminal (LD1 / LD4), the Brown to the second (LD2 / LD5) and the Yellow to the buzzer (BZ1 / BZ2).

WIRE	PSU BOARD	IC1000+JX / IC1000IP+JX CONTROLLER
RED (+V)	12vDC 1.5A	5v
BLACK (0V)	0vDC 1.5A	0v
GREEN (Data-0)		CK1 / CK2
WHITE (Data-1)		DT1 / DT2
BROWN (LED Control)		LD1 / LD4
PURPLE (Tamper)		If required, connect to a spare input on controller

## 8. DOOR CONTACTS AND INPUT DEVICES

A magnetic contact, passive infra-red unit, request to exit switch or any other form of contact can be connected to and monitored via the IC1000+ system. There are four standard inputs on each controller, and all can be set up from the GuardPoint Pro / GuardPoint Pro Lite software to trigger certain tasks, such as opening doors, setting alarms, or simply informing your security staff.

As standard, inputs I3 and I4 are configured to allow connection of Request to Exit (REX) switches for door 1 and door 2 respectively, although this configuration can be altered - or removed entirely - via the access control software to suit your requirements.

### Protection Against RFI Interference:

The following should be considered in order to prevent malfunction or interruption:

1. If the distance between the alarm detector, push-button, etc., and the controller board is greater than 10 meters, use a shielded cable and connect the shields to the ground of the control unit.
2. Always ensure that a distance of at least 50 cm separates the connecting cables from both high-tension cables and electric lock cables.

## 9. LOCK DEVICE - RELAY OUTPUTS CONNECTION


The three relays on the controller can support a maximum of 24V/1A, and each is completely configurable via the GuardPoint Pro / GuardPoint Pro Lite software.

The standard wiring configuration of an electronic lock can be seen below:

In this example, an electronic lock is wired to Relay 1.

As shown, it is always important to fit a diode at the lock end of the output, of type 1N4004 or equivalent.

It is also important to wire the positive and negative directly to the appropriate terminals on the separate Power Supply Unit (PSU).

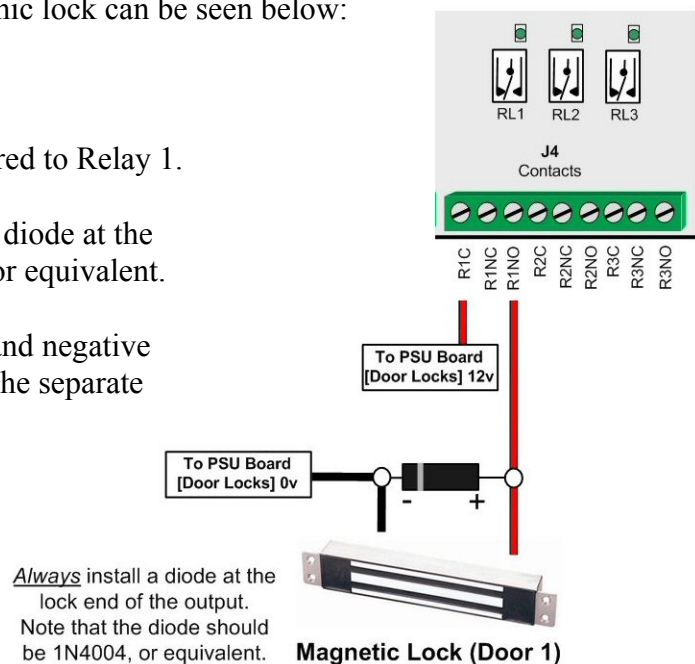

### **Important!**

- If the release mechanism has a charge that exceeds the authorised limit or has a strong inductive charge (as in the case, for example, of revolving doors or turnstiles), then it will be necessary to use an intermediate relay between the system and the charge. The charge must be powered with a separate power supply. The intermediate relay and the IC1000+ boards may both be powered with the same power supply.
- The cable connecting the release mechanism to the controller (or to the intermediate relay) must be isolated, and there must be a distance of at least 50cm between this cable and the other cables.

# 10. PC CONNECTION


## 10.1 TCP/IP Connection

The IC1000IP+JX controller is supplied with a TCP/IP socket on board, allowing it to be assigned an IP address and so added to a TCP/IP network. If you are using the IC1000+JX (the non-TCP/IP version), you can disregard this section and move on to 8.2 or 8.3, depending upon your method of communication. In order to connect the IC1000IP+JX, plug one end of a standard RJ45 network cable into the socket, and the other either into your router/hub, or directly into the Ethernet socket on a PC; the controller will then appear on the network. Before it can be used, however, the controller must be configured via the application DS Manager (available on the GuardPoint Pro disc, or for free download from the Sensor website).

To configure the controller, please go to *Start, Programs, Tibbo, DS Manager*. A window such as that on the right will now appear.

In the main panel of the window will be a list of all currently detected TCP/IP controllers.

It is almost certainly the case that your IC1000IP+JX is new, and so has a default IP address. This, along with some other settings, will need to be changed. Click on the visible TCP/IP controller to select it, then click on the *Settings* button at the top of the window to bring up the configuration window.

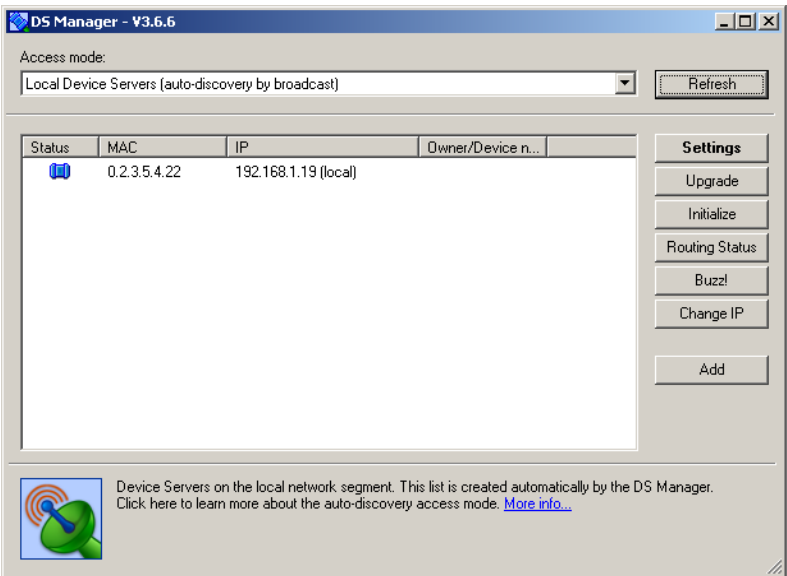

There are a series of tabs running across the top of the window. Using the tabs you will need to locate the following settings and change them:

IP-address	192.168.1.19
Port	1001
Transport protocol	1- TCP
RTS/CTS flow control	0- Disabled or remote
DTR mode	0- Idle or remote
Baud rate	3- 9600 bps

IP-address	This should be a unique address
Port	This should be set to '1001'
Transport Protocol	This should be set to '1-TCP'
RTS/CTS flow control	This should be '0-Disabled or remote'
DTR mode	This should be '0-Idle or remote'
Baud rate	This should be set to '3-9600 bps'

Once changed, click *Ok* to return to the main window. The IC1000IP+JX is now configured and its status icon – represented by the blue plug to the left - should be solid and clear (as in the screenshot). The controller is now ready to communicate with the software. For full details on establishing communication, please refer to the GuardPoint Pro / Pro Lite manual.

### Important!

- When assigning an IP address, it is vital that you choose one that will be compatible with your existing network/PC. In most cases, this will mean using the first, second and third sets of digits from your PC/router, and making the last set unique. For example, an IC1000IP+JX controller is plugged into a router that has an IP address of 192.168.1.10. The controller's IP address should therefore 192.168.1.XXX, where XXX is any unique number (in the above screenshot, 19).
- It is vital that IP addresses do not share the same numbers. For further assistance, please consult whoever manages the PC network at the installation site, or contact Sensor's technical support department.
- If you are intending to use Biometric readers, the baud rate should be set to '5-38400 bps'.

## 10.2 RS232/RS485 Connection

Whilst the IC1000IP+JX has an RJ45 network connection socket on board, both the IC1000IP+JX and the IC1000+JX can be connected to a PC via the RS232/RS485 port.

If the controller has to be connected to a PC at less than 30 meters, either the RS232 port or the RS485 port may be used. If the distance is greater than 30 meters, or if several controllers must be connected together, the RS485 port should be used.

The default characteristics of the serial transmission are: Asynchronous Serial Transmission, 9600 baudrate, 8 data bits, no parity, 2 stop bits. Note that the baud rate may be changed from the PC software.

### RS232 Port. Jumpers JP2



The three signals - 0v, Rx and Tx - are connected to a serial plug in the PC as follows:

<u>25 Pin Plug (PC)</u>	<u>9 Pin Plug (PC)</u>	<u>IC1000+ J3</u>
Pin 7 (0v)	Pin 5 (0v)	0v
Pin 2 (Transmit)	Pin 3 (Transmit)	Rx/L
Pin 3 (Receive)	Pin 2 (Receive)	Tx/H

### RS485 Port. Jumpers JP2



In nearly all cases RS485 connection will take place via an RS485/USB interface, however in the rare situations where an RS485/RS232 interface is to be used, the interface should be wired to the PC according to the details above.

To connect via an RS485/USB interface, simply plug the USB connector into a port, and wire as follows:

<u>USB485</u>	<u>IC1000+ J3</u>
X-	Rx/L
X+	Tx/H

The GuardPoint Pro / GuardPoint Pro Lite software can then be configured to communicate with the controller via the RS485/USB interface. Fuller details and instructions on this connection can be found on the datasheet supplied with the interface, or from the Sensor website.

### Protection Against RFI Interference:

Most of the interference will come via induction to the cable shield, on which high and very high voltages may appear. To prevent this, the following rules should be considered:

1. Use a Belden 8443 triple-wire cable ("Receive"/"Transmit"/0v) for the RS232 connection, and a Belden 9841 twisted and shielded pair cable for the RS485 connection.
2. A good quality cable shield must be used and the shield must be connected to a strong earth. The shield should be copper rather than aluminium, since the latter provides only partial attenuation.
3. All communication cable shielding should be connected to only one extremity in order to avoid the problem of ground loops, whereas the connection for the RS485 wire shield should be carried out at the level of the concentrator, and the connection for the RS232 wire shield should be carried out at the level of the terminal.
4. A distance of at least 50cm must separate all connecting cables from high-tension cables, from cables connected to an electrical power box controlled by the system, or from any cables capable of generating strong interference (such as cables connected to high-power motors, generators, wireless telephone, etc.). Since it is often located besides a variety of cables, the external telephone line can also be a source of strong interference.
5. Extremely high tension produced by lightning bolts can enter the terminals through these lines. Such tension can reach the level of hundreds of thousands of volts, so it is advisable to use some form of surge protection.

### **Important!**

- Do not connect the communication cable screen at any point other than at the RS232/RS485 interface end.
- For all TCP/IP connections, Belden 1624P (24AWG, CAT5, shielded ethernet) cable is recommended.
- For all RS232 connections, Belden 8443 (22AWG, non-twisted) cable is recommended.
- For all RS485 connections, Belden 9841 (24AWG, twisted and shielded pair) cable is recommended.

### 10.3 Setting the Controller Address

In order to programme the system, each controller has to have a unique address. This address is defined with the switches 1 to 5 on the dipswitch bank DS1. Please consult the table below when setting the address. In this table 0 = OFF (switch is to the Left) and 1 = ON (switch is to the Right):

<b>Switch 1 2 3 4 5</b>	<b>Address</b>	<b>Switch 1 2 3 4 5</b>	<b>Address</b>
0 0 0 0 0	00	0 0 0 0 1	16
1 0 0 0 0	01	1 0 0 0 1	17
0 1 0 0 0	02	0 1 0 0 1	18
1 1 0 0 0	03	1 1 0 0 1	19
0 0 1 0 0	04	0 0 1 0 1	20
1 0 1 0 0	05	1 0 1 0 1	21
0 1 1 0 0	06	0 1 1 0 1	22
1 1 1 0 0	07	1 1 1 0 1	23
0 0 0 1 0	08	0 0 0 1 1	24
1 0 0 1 0	09	1 0 0 1 1	25
0 1 0 1 0	10	0 1 0 1 1	26
1 1 0 1 0	11	1 1 0 1 1	27
0 0 1 1 0	12	0 0 1 1 1	28
1 0 1 1 0	13	1 0 1 1 1	29
0 1 1 1 0	14	0 1 1 1 1	30
1 1 1 1 0	15	1 1 1 1 1	31

*Addressing the IC1000+ Controller*

# 11. USING THE SYSTEM

## 11.1 Initialisation

Before using the system, it must be initialised and programmed from the host computer. You will need to refer to the GuardPoint Pro / GuardPoint Pro Lite manual for details, or call our technical support department who will be happy to walk you through the process.

## 11.2 Access

To request access, either pass a card and/or key in a PIN code at the keypad unit.

In situations where a keypad is being used, a keyed code must be followed with the hash (#) key in order to be validated or by the star (\*) key to be cancelled. In the case of an SP-KPV, where both a card and PIN may be required, the PIN must be keyed *after* the card is presented.

If you have a magnetic reader the card track must be located on the right-hand side; if you have a barcode reader the code must be located on the left-hand side; for other technologies refer to the instructions supplied with the product.

The controller then checks the request according to its internal databases:

- If access is granted, the reader's green led will light and the door will unlock.
- If access is denied, the reader's red led will light and the door will remain locked.

Successful access relies upon the card/code having been set up previously in the GuardPoint Pro / GuardPoint Pro Lite software. Complete directions on how to enrol badges can be found in the manual that is supplied with the software.

## 11.3 Events Buffer

All events (card transactions and alarms) are recorded in the Events Buffer on the controller's internal memory. In both the IC1000+JX and IC1000IP+JX, this buffer can hold up to 4000 events.

When the Buffer is almost full (at approx. 3880 events in memory), each subsequent card transaction will result in the system sounding with 2 short bleeps and the LED blinking 3 times. These warning messages are your indication to clear the buffer from the software, and, upon being cleared, the warning will disappear.

When the Buffer is full, the system will behave in one of two ways:

1. If the 'Access Granted when Buffer Full' option has been set in GuardPoint Pro / GuardPoint Pro Lite, the system will start to record the new transactions over the existing ones, so the warning will disappear.
2. If the 'No Access if Buffer is Full' option is set, the system will issue an audible and visual warning at each card pass, as described above. Access will not be granted, even for valid cardholders, and no new transactions will be recorded in the buffer. The system can only be unlocked by connecting the controller to a PC and downloading the events.

## 11.4 Alarm Inputs

The IC1000+ controllers have a total of 4 inputs, to which any kind of detector may be connected (magnetic contacts, passive infra-red, request to exit, etc.). The mode of each input (Normally Open or Normally Closed), together with its time zone, is fully programmable from the access control software, and may be set up to operate in the following modes:

- 1. Door Control for a Door Alarm**

If a door contact is connected to the 'Door control' input, an alarm will be raised on the 2 following cases:

- a. The door is forced opened, i.e. opened with no valid card.
- b. The door is opened with a valid card but left opened more than a pre-defined delay.

- 2. Door Remote Button (Request to Exit, RTX)**

The door may be opened via a push button connected to the 'Door Remote' input. By default, this will be I3 for door 1 and I4 for door 2, although it is fully configurable from the GuardPoint Pro / GuardPoint Pro Lite software.

In both the IC1000+JX and the IC1000IP+JX, an alarm message is also sent to the PC, which may in turn be configured to take certain actions.

## 11.5 Relay Outputs

The IC1000+ controllers have 3 output relays. The function of each relay, and the way in which it is activated, is fully programmable through the GuardPoint Pro / GuardPoint Pro Lite software.



## 12. MULTIPLE CONTROLLERS

As well as connecting to a single controller, it is also possible to link several controllers together, either in a single network or in multiple networks. Depending on your installation, and the types of controller involved, there are various methods of achieving this, so what follows is a very general guide.

If what you require isn't covered in this guide, or you require further clarification on a particular point, please do not hesitate to contact our technical support department, who will be happy to assist you.

Generally speaking, multiple controllers will fall into one of two types; an RS485 network, or a TCP/IP network. It is also possible to mix these two types of network to a degree, with the computer connecting to a controller via TCP/IP, and that controller then connecting to another via an RS485 cable.

### 12.1 TCP/IP Network

An all-TCP/IP network is perhaps the easiest to establish. Each controller has an RJ45 socket, either embedded in the board (as in the case of an IC1000+IP), or as part of an extension board (as in an expanded IC2000 or IC4000), and each of these is connected to a router or hub.

Requires:	1) A router/hub with enough ports for each controller and the PC running GuardPoint Pro. 2) Each controller requires its own TCP/IP RJ45 socket.
Setup:	<u>Hardware</u> Each controller and the computer running GuardPoint Pro is connected to the router/hub via an ethernet cable. It is important to get the correct type of cable, which will normally be of the <i>patch</i> lead type. Each controller must be configured with the DS Manager software (see section 10.1). <u>Software</u> In GuardPoint Pro, each controller needs a separate network. This is established in the <i>Parameter, Controller Network</i> window, as detailed in the GuardPoint manual.
Advantage(s):	1) Since the network runs on TCP/IP, the overall distances that can be covered are theoretically infinite. 2) TCP/IP is an extremely stable, very reliable method of connection. 3) Using standard computing tools and methods, a TCP/IP network is very easy to troubleshoot / test.
Disadvantage(s):	In a purely TCP/IP environment, you can only have 1 controller per network in the software.

### 12.2 RS485 Network

An all-RS485 network is still the most common type of network. Each controller has a terminal block that consists of a Transmit terminal and a Receive terminal, into which is wired the RS485 cable. Up to 32 individual controllers can share the same RS485 network, with each controller connected to the next.

Requires:	1) An RS485 converter that allows for connection between the computer and the first controller. This is normally via a USB485 device. 2) Suitable cable for the RS485 bus that will connect each controller (see section 6).
Setup:	<u>Hardware</u> The PC is connected to the first controller, usually by a USB485 converter, which wires directly to the Tx/H and Rx/L terminals. Each controller has its Tx/H and Rx/L terminals wired to the Tx/H and Rx/L terminals of the next controller (so controller 1 is wired to controller 2, controller 2 to controller 3, and so on). A network exceeding a certain distance may require a resistor (see the table in section 6.1). <u>Software</u> In GuardPoint Pro, you need to establish only one network. This is established in the <i>Parameter, Controller Network</i> window, as detailed in the GuardPoint Pro manual. Each controller is then setup in the <i>Parameter, Controller</i> window, as per the GuardPoint Pro manual.
Advantage(s):	1) A single network can have up to 32 individual controllers, of varying type. 2) With proper grounding, an excellent level of RFI immunity can be gained.
Disadvantage(s):	1) An RS485 network cable can only maintain reliable communication up to a total distance of 1200m. 2) The RS485 cable can be susceptible to RFI interference (see section 10.2).

## 12.3 Mixed Networks

In addition to ‘pure’ networks (that is, networks that are either exclusively TCP/IP or exclusively RS485), it is also possible to mix the two connection types.

Generally speaking, because a TCP/IP connection requires its own network in the software, any mixed network must begin by being connected directly to the TCP/IP controller, with the subsequent RS485 controllers being added to it, one after the other.

In the case of an IC1000+IP being the controller that begins the network, then RS485 cables to the next controller will run from the Tx/H and Rx/L terminals in block J3 as standard, with each subsequent controller being added as per the RS485 network instructions outlined in section 12.2 above.

However, if an IC2000 or IC4000 begins such a network, then the RS485 connection between it and the next controller must originate from the H and L terminals on the TCP/IP extension board, and not the Tx/H and Rx/L terminals of the main board. The reason for this is that by adding a TCP/IP extension board, the RS485 terminal block of the IC2000/IC4000 (J4) becomes deactivated.

Subsequent controllers are added as per the RS485 network instructions outlined in section 12.2 above.

In mixed networks where more than one TCP/IP connected controller is present, each one will need to form the first controller of its own network.

For example, if you have two controllers that are connected to a network via TCP/IP, an IC1000+IP and an IC2000 with a TCP/IP extension board, then you will establish two networks in the GuardPoint Pro software.

By adding extra controllers to either of these two via an RS485 connection, each of these two networks can contain up to 32 controllers in total, allowing for dozens of inputs and relays to be utilised.

## 12.4 Addressing Multiple Controllers


In any installation where you have multiple controllers on the same network, they must be correctly – and individually – addressed. Addressing is configured via the red bank of dipswitches, and further details on the switch settings can be found under section 10.3.

In most cases, the first controller in any network will be address 00, the second 01, the third 02, and so on. Whilst it is not essential to follow a sequential progression, it is logical, and will make locating certain controllers much easier at a later date, especially if problems have to be troubleshooted.


### **Important!**

- Each controller must have a unique address (i.e. one not shared by any other controller in that network).
- Controllers in *different* networks can have the same address. For example, there can be an address 17 controller in network 1, and an address 17 controller in network two.


## APPENDIX A : 10 IMPORTANT RULES

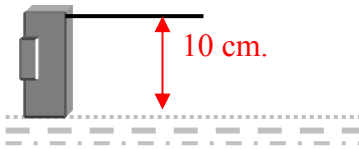


1. Never pass the door opener cable near the other cables; it must be at least 10cm from all other cables.

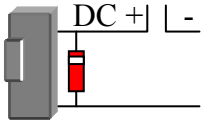


2. Use always a diode if the electric lock is DC powered. The diode should be installed at the lock end, and should be a 1N4004 type or equivalent.

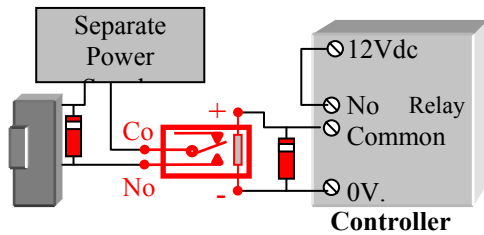


3. If the electric door lock consumption is more than 24V/1A, use an intermediate relay.

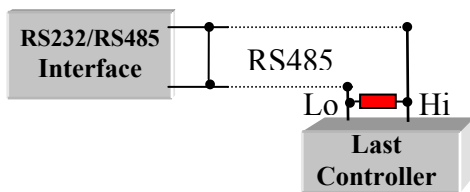

4. If the total distance between the controller and RS485 Interface is greater than 500m, install a 120 ohms resistor at the end of the RS485 line.

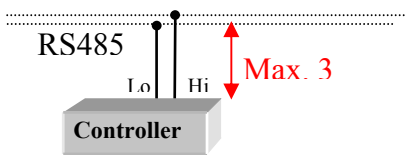


5. Never connect a controller to the RS485 bus farther than 3 meters.

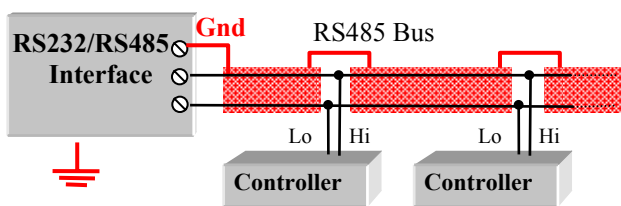


6. Link all the RS485 wire shields together and connect them at the RS232/RS485 Interface end, never the controller end.

7. Use a good earth at the Interface.

8. Use surge protection if the region is susceptible to lightning.

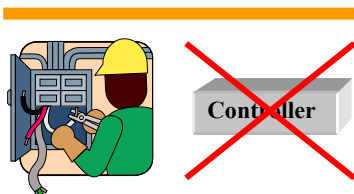

9. Never install a controller - or its cables - near high voltage lines or a heavy duty electric devices (such as motors, transformers, high voltage sources, etc.).

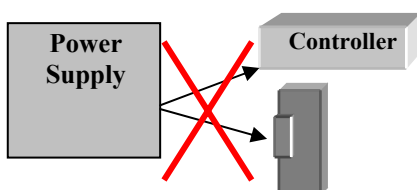

10. Never use the same single power supply for both the controller and the electric lock. Use either separate supplies, or the PSU (Power Supply Unit) board in the controller case.

## **APPENDIX B : TECHNICAL SUPPORT**

In the unlikely event that you encounter problems with your installation/running of the site, it may be necessary to contact our technical support department. Support is available from 08:30 to 17:30, Monday to Friday, and we are happy to answer your questions, or to guide you through any aspect of your installation.

**Sensor Access Technology Ltd  
Technical Support Team**

**Sensor House  
Westergate Road  
Brighton  
BN2 4JZ**

**[support@sensoraccess.co.uk](mailto:support@sensoraccess.co.uk)**

**+44 (0) 870 890 1154**

Manuals, Installation Guides, Datasheets and  
Application Notes are available from our website:

**<http://www.sensoraccess.co.uk>**